

# HP Insight Control for Linux



These activation instructions can also be found at [www.hp.com/go/insightlicense](http://www.hp.com/go/insightlicense).

HP Insight Control for Linux includes two license keys:

1. HP Insight Control for Linux
2. HP Integrated Lights Out Advanced (iLO Advanced)

These keys may be provided on a license certificate and/or in a license key file.

The Insight Control for Linux licensing model has changed starting with V6.00. Customers running prior versions of the product who have purchased additional Insight Control for Linux licenses after the release of V6.00 are strongly advised to upgrade to V6.00 first, before applying these licenses.

For successful operation both keys must be applied to each managed system. Starting with V6.00, these keys enable full functionality of the suite, including power management and virtual machine management.

Your Insight Control for Linux license key may contain one or more licenses. One license is required for each managed system.

To manually add the license keys to the SIM license manager:

1. Select the following menu item from the SIM GUI: **Deploy -> License Manager...**
2. Click **Add Licenses....**
3. Enter the Insight Control for Linux license key.
4. Click **Process...**
5. Click **Add Licenses Now.**
6. Click **OK.**

It is recommended that license(s) are added directly from a license key file to avoid chances of error from manual transcription. To add licenses from a license key file:

1. Select the following menu item from the SIM GUI: **Deploy->License Manager...**
2. Click **Add Licenses...**
3. Select the option to "Specify a file name and path:" and enter the path/name of the license key file.
4. Click **Process...**
5. Select the products you wish to add.
6. Click **Add Licenses Now.**

You must also apply an Insight Control for Linux license to the systems you want to manage:

1. Select the following menu item from the SIM GUI: **Deploy -> License Manager...**
2. Select the **Insight Control for Linux** product.
3. Click **Manage Licenses....**
4. Select the **Insight Control for Linux** license.
5. Click **Apply Licenses....**
6. Select the servers to which you want to apply a license.
7. Click **Apply.**
8. Click **Next.**
9. Select the servers to which you want to apply a license.

10. Click **Apply Licenses Now.**

Your iLO Advanced license key activates iLO Advanced features. For the latest instructions, which may supersede those shown below, refer to [www.hp.com/go/insightlicense](http://www.hp.com/go/insightlicense).

These instructions assume the network client has a network connection to the iLO or iLO 2 management processor.

To install the iLO Advanced license and enable the iLO Advanced functionality using a supported web browser:

1. Log in to iLO or iLO 2 with a user ID that has the **Configure iLO Settings** privilege.
2. Click the **Administration** tab and then click **Licensing**.
3. Enter the 5 x 5-character license key in the space provided.
4. Click **Install**. The End User License Agreement (EULA) confirmation displays. The EULA details are available with the license kit.
5. Click **OK** to accept the terms of the EULA enclosed with this product. The licensed features are now enabled.

HP recommends you retain the license key for future reference. The license key is required for technical support and future upgrades.

For activation of iLO Advanced Pack functionality on groups of iLO or iLO 2 processors, use the HP Lights-Out Configuration Utility. Details on this scripting utility and activation using the command line interface are located in the HP Integrated Lights-Out Management Processor Scripting and Command Line Resource Guide on the HP website at [www.hp.com/bizsupport](http://www.hp.com/bizsupport). Select **Manuals**, and search for iLO or iLO 2.

This license entitles you to the iLO Advanced features in the current version of iLO 2 firmware at the time of activation. To download the latest firmware and also learn more about iLO features and capabilities, visit [www.hp.com/go/iLO](http://www.hp.com/go/iLO).

The following resources are also available on the web at [www.hp.com/go/ic-linux](http://www.hp.com/go/ic-linux):

- Access to software downloads
- Installation and user guides
- Support and services information

You can order Insight Control for Linux software media for your product directly from HP or your preferred reseller. HP recommends that you download and install the latest product software from the web address listed above.

## Support and Software Updates

One year of 24x7 Software Technical Support and Software Updates is included with this software. For more information about this service, see [www.hp.com/services/insight](http://www.hp.com/services/insight). After

HP processes your support registration, you will receive a Service Agreement Identifier (SAID). To receive the software updates that you are entitled to, you must use your SAID and access the Software Update Manager (SUM) at the HP IT Resource Center (ITRC) home page: [www.itrc.hp.com](http://www.itrc.hp.com).

## Count on HP for Software Support Solutions

The following support upgrade options are available:

- Three years of 24x7 Software Technical Support and Software Updates
- Four years of 24x7 Software Technical Support and Software Updates
- Five years of 24x7 Software Technical Support and Software Updates

To upgrade your support, or for technical issues using Insight Control products purchased through HP, contact an HP support center:

[http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html)

Software is subject to the terms and conditions described in the End User License Agreement (EULA). During installation, be sure to read the EULA carefully before proceeding.