

These activation instructions can also be found at www.hp.com/go/insightlicense.

HP Insight Control licensing instructions

HP Insight Control uses two license keys and one license file. For successful operation of Insight Control all three licenses must be applied to each managed target system. Depending on your order each license key and license file may contain licenses for 1 or for multiple target systems.

Starting with version 6.0 the License Manager can also process HP Insight Software license files. These files have a .KEY file extension, and should not be confused with the license file for HP Insight Control server deployment.

If you purchased [standalone licenses for iLO Advanced](#), please see the instructions for applying [License Key #2](#).

If you purchased [standalone licenses for Insight Control server deployment](#), please see the instructions on applying the [Server Deployment License File](#).

While no longer actively sold, if you have standalone licenses for HP Insight Server Migration software, HP Insight Power Manager software or HP Insight Virtual Machine Manager software, please see the instructions for License Key #1, but be aware that your license key will only enable the Insight software functionality for which you bought a license.

Insight Software License File: The Insight Software license file may contain License Key #1 and potentially other HP Insight Software license keys.

To add keys using an Insight Software license file:

1. Go to Deploy -> License Manager.
2. Click Add Licenses.
3. Specify (or browse to) a file name and path of a .KEY license file. (Note: this procedure does not process Insight Control server deployment license files.)
4. When the key details appear, select the license(s) that you want to add and click Add Licenses Now.

License Key #1: The [Insight Control main license key](#) licenses Insight Control functionality for power management, performance management and virtual machine management. Starting with version 6.0 this key also licenses server migration functionality.

Note: A product will not be listed in the "Product License Information" overview until you add the first key.

To add a key:

1. Go to Deploy -> License Manager.
2. Click Add Licenses.
3. Enter the key in the Specify Key String field and then click Process.
4. When the key details appear, click Add Licenses Now.

To apply a license to a target system:

1. Go to Deploy -> License Manager.
2. Select Insight Control in the Product License Information list and then click Manage Licenses.
(When applying standalone licenses for HP Insight Server Migration software, HP Insight Power Manager software or HP Insight Virtual Machine Manager software, select the appropriate license and then click Manage Licenses.)

Insight Control 6.x:

3. A list of licenses appears. Select the license to use and then click Apply License(s).
4. Select the systems to license, then click Apply and Next.
5. Select the unlicensed systems and then click Apply License Now.

Insight Control 3.x:

3. A list of licenses appears. Click Apply License(s).
4. Select the systems to license, then click Apply and Next.
5. Select the unlicensed systems and then click Select License.
6. Select the license to use and then click Apply License.

License Key #2: Your iLO Advanced license key activates iLO Advanced features. These instructions assume the target system has a network connection to the iLO or iLO 2 management processor.

To install the iLO Advanced license and enable the iLO Advanced functionality using a supported web browser:

1. Log in to iLO or iLO 2 with a user ID that has the Configure iLO Settings privilege.
2. Click the Administration tab and then click Licensing.
3. Enter the 5x5-character license key in the space provided.
4. Click Install. The End User License Agreement (EULA) confirmation displays.
5. Click OK to accept the terms of the EULA enclosed with this product. The licensed features are now enabled.

Note: If you purchased Insight Control bundled with a BladeSystem c-Class enclosure License Key #2 is specifically for iLO Advanced for BladeSystem.

Server Deployment License File: Load the Insight Control server deployment license file into the Insight Control server deployment server using the separate License Utility to apply your license. Shut down all deployment server consoles and web consoles. Click Start -> Programs -> Altiris -> Deployment Solution -> Product Licensing Utility. Enter the path to the new license file in the Activation Key File Information field, and

click Next.

Additional resources

The following additional resources are available on the web at www.hp.com/go/insightcontrol:

- Access to software downloads
- Installation and usage guides
- Support and services information

You can order the HP Insight Software media kit for your product directly from HP or your preferred reseller. HP recommends that you download and install the latest product software from the URL listed above.

Support and software updates

One year of 24x7 Software Technical Support and Update Service is included with this software. For more information about this service, see www.hp.com/services/insight. After HP processes your support registration, you will receive a Service Agreement Identifier (SAID). To receive the software updates that you are entitled to, you must use your SAID and access the Software Update Manager (SUM) at the HP IT Resource Center (ITRC) home page: www.itrc.hp.com.

Count on HP for software support solutions

The following support upgrade options are available:

- Three years of 24x7 Software Technical Support and Software Updates
- Four years of 24x7 Software Technical Support and Software Updates
- Five years of 24x7 Software Technical Support and Software Updates

To upgrade your support, or for technical issues using Insight Software products, contact an HP support center:

http://welcome.hp.com/country/us/en/wwcontact_us.html

Software is subject to the terms and conditions described in the End User License Agreement (EULA). During installation, be sure to read the EULA carefully before proceeding.